


# Default Sdvcam User Guide

## 1. Control

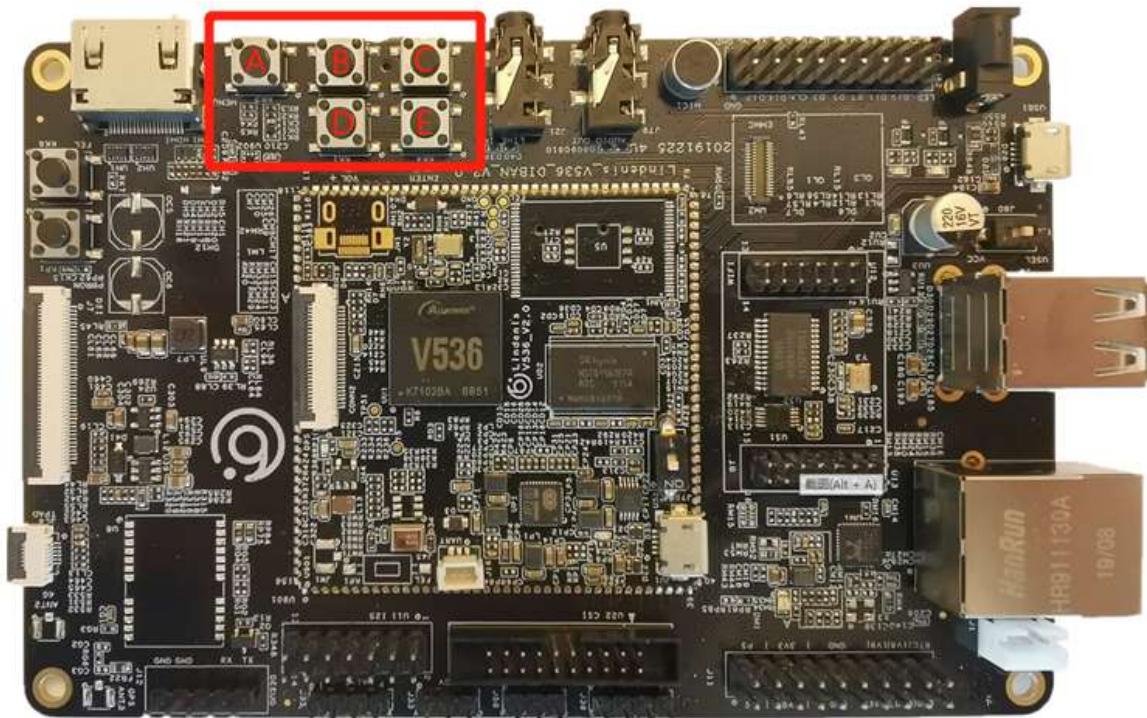

KeyName	KeyFunction
KEY_A	Enter/Start/Stop/Capture
KEY_B	Up
KEY_C	Menu
KEY_D	Down
KEY_E	Mode

## 2. Display Sink Switch

The sdvcam default display sink of the board is HDMI 1080p@60Hz.

And if you want to change it to LCD. You should have to change the configuration of the sdvcam and the system and then re-build both of them follow thiese steps:

1. croot (source ./build/envstepup.sh first)

2. make menuconfig


a) choose the LCD sink of sdvcam

-> Allwinner

-> eyekee-mpp

-> eyekee-mpp-awcadr

-> select display sink

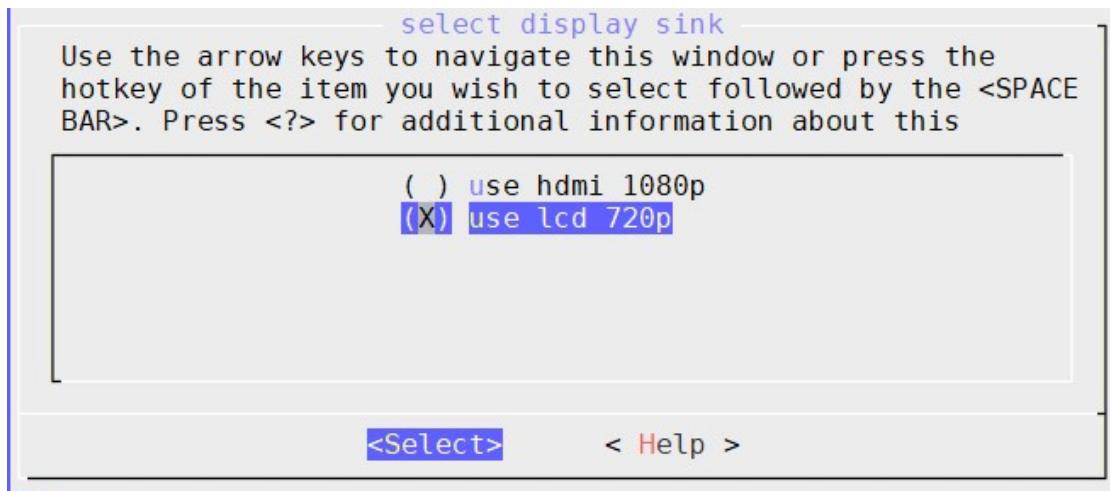

b) Save and exit

3. cd /package/allwinner/eyekee-mpp/awcadr

4. mm -B

---

## 5. modify the configuration file

device/config/chips/v536/configs/Lindenis\_SBC/sys\_config.fex

```
--- a/config/chips/v536/configs/Lindenis_SBC/sys_config.fex
+++ b/config/chips/v536/configs/Lindenis_SBC/sys_config.fex
@@ -449,8 +449,8 @@ nand0_p3 = 0x55aaaa55
 disp_init_enable      = 1
 disp_mode             = 0

-screen0_output_type   = 3
-screen0_output_mode    = 10
+screen0_output_type   = 1
+screen0_output_mode    = 4

 screen0_output_format  = 1
 screen0_output_bits     = 0
@@ -474,11 +474,11 @@ screen1_output_scan      = 0
 screen1_output_aspect_ratio = 8

 disp_rotation_used = 1
-degree0 = 0
+degree0 = 3

 fb0_format            = 0
-fb0_width             = 1920
-fb0_height            = 1080
+fb0_width             = 1280
+fb0_height            = 720

 fb1_format            = 0
 fb1_width             = 0
```

## 6. croot

7. make -j8 V=s

8. pack